

Rinse Pimp



Step 1


Wash your vehicle using a sponge and warm water with car shampoo added. Take care to be thorough removing all the dirt.

Step 2

Rinse the vehicle using tap water to remove all the suds. Do not allow the vehicle to dry before the next step.



Rinse Pimp 2 connection diagram (picture shows Rinse Pimp 1)

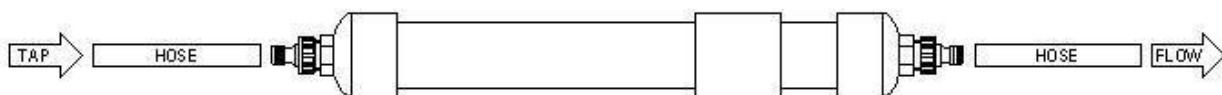

Above diagram is for connection information only, the Rinse Pimp must be vertical for optimum results



Step 3

Connect the Rinse Pimp as shown in the diagram above. The Rinse Pimp should be wall mounted vertically with the flow going down (Please see wall mounting instructions). Keep the length of the hose from the Rinse Pimp to the vehicle as short as possible to avoid wastage. Rinse the vehicle for a second time using the filtered water with a spray gun set on a fine mist.

Step 4.

Leave the vehicle to dry naturally to reveal the effortless spot-free shine.



For best results and to extend the resin life we recommend the following:

- Do not use in conjunction with a pressure washer.
- Keep flow rate to a minimum (we recommend about 2 litres per minute) & use water from the Rinse Pimp 2 sparingly. Only use enough water to re-wet all surfaces working from top to bottom.
- Mount vertically & feed water from the top each time so that water travels through the resin in the same direction.
- The TDS meter (total dissolved solids meter) should be used to test the water quality and when the TDS reads 20ppm+ the resin should be changed. The resin will still continue to filter the water and you can achieve relatively spot free results between 20ppm and 50ppm but the water quality will quickly deteriorate after it reaches 20ppm.